

> Contents

Correct Operation	4	Assembly Instructions	10
Intended Use		Variants & Options	13
Inspection Prior to Initial Operation		Quality & Safety	20
Inspection Before Starting Work		Regulations, Standards & Directives	
Technical Characteristics		Accreditations	
Temperature Range		Conformité Européenne [CE]	
		Testing	
Fall Protection Applications	5	Language	
Use as a Rope Access, Work Positioning and Fall Protection Anchor		Product IPR	
Notes for Correct Operation		Product Labelling	22
Warning		Inspection Record	23
Inspection, Maintenance & Repair	8		
Inspection Before Use			
Regular Inspections			
Maintenance & Repair			
Storage & Transportation			
Sockets	9		
Sockets			
Socket Installation			
Disclaimer			



Lightweight. Portable. **Safe.**

Please read the following instructions and guidance notes carefully, before using or operating the system. They contain important information about how to handle and use the system in a safe and efficient way, avoiding danger, reducing repair costs and downtime, and increasing the reliability and lifespan of the system.

They apply for:

- › Operation, including preparation, troubleshooting during operation and cleaning
- › Maintenance, inspection and repair
- › Transportation

It is the responsibility of the end user to adhere to the Health & Safety and accident prevention standards and legislation valid in their respective countries and any regions in which the system is being used. It is also incumbent on the user or competent person to ensure that anyone working with the equipment has the necessary medical and physical capabilities. A rescue plan also needs to be in place in the event of an emergency that could occur during the work. This document should form part of the overriding Risk Assessment and Method Statement required for each lift.



Intended Use

This product is intended to be used for; the lifting of personnel, rope access, or providing a safety anchor for the prevention of falls.

It is expected that all users of this product have the necessary medical and physical capabilities, are fully trained and competent in its safe assembly and use.

We would remind users of the equipment to ensure that work is properly planned, risk assessments carried out and as required, method statements for carrying out work provided.

Where required the owner or user of the equipment should ensure that a qualified person has been consulted in respect of the need for structural validation, for example [but not limited to]; calculating structural integrity and the structures ability to resist the moment generated by use of the product both statically and dynamically.

Inspection Prior to Initial Operation

Each product must be inspected prior to initial operation by a competent person to ensure that the structure is safe and that it has not been damaged by incorrect assembly, transport or storage.

Inspection Before Starting Work

Before starting work, the product assembly and all load-bearing components should be checked for visual defects as per the inspection checklist on page 8.

Technical Characteristics

This product has different ratings depending upon the variant you choose. The table below indicates the maximum capabilities for standard range systems only. If unsure about your system consult serial labels, information filled in on page 23 or consult your supplier.

Product Code	Max. Radius [mm]	Max. Allowable Arrest Force [per user]	Max. Rated Mass	Max. System Mass	Capacity [persons]	Rescue Accompanied Descent	Max. Deviation Angle Service load (6kN) Fixed sockets
TDRAC50001	1600	6kN	150	150	1	x	10°
TDRAC50002	1000	6kN	150	150	1	x	25°
			115	230	2	✓	
TDRAC50003	1200	6kN	150	150	1	x	20°

Maximum Pivot angle

Socket	Socket Type	TDRAC50001	TDRAC50002	TDRAC50003
Side Mount Socket	Concrete rear loading [over the wall] Socket 80mm below edge	±90°	±90°	±90°
	Steel	360°	360°	360°
Top Mount Socket	Concrete [325mm from edge]	±90°	±90°	±90°
	Steel	360°	360°	360°

Temperature Range

This product can be operated in ambient dry temperatures between –20°C and +55°C (-4°F and 131°F). Consult your supplier in case of extreme working conditions.



Use as a Rope Access, Work Positioning and Fall Protection Anchor

This section must not be read in isolation from all other sections of this manual. Read the whole manual before using this product.

Rope Access and Work Positioning: This product is tested to and conforms with the requirements of BS8610:2017 Personal Fall Protection Equipment – Anchor Systems for Type A Non-Load Limiting products. Different product types meet different aspects of the standard and that is defined further in this manual.

- › Type A1 – Restraint
- › Type A2 – Fall Arrest
- › Type A3 – Rope Access & Work Positioning
- › Type A4 – Rescue [accompanied descent]
- › Type A5 – Rescue [remotely operated or self-operated] – direct attachment
- › Type A6 – Rescue [remotely operated] – re-direct attachment
- › Type A7 – Evacuation

In addition the product is tested to and meets the requirements of IRATA's International Code of Practice for Industrial Rope Access, being rated a minimum of 15kN.

Fall Protection: This product is tested and conforms to the requirements of EN795:2012 Personal Fall Protection Equipment – Anchor Devices for single users. When being used for fall arrest, the operator must use a body harness and a shock absorber that complies with the relevant national standards and regulations and that limits the maximum allowed force (MAF) to 6kN.

Users may only be attached to the system via the designated anchor points. Only the designated number of users should be attached to each anchor point. All ropes should be independently connected to the designated anchor points and must pass over the sheaves at each end of the beam. Use of the equipment must be properly planned, and all user weights clearly known along with a clear understanding of the WLL and constraints of all personal fall arrest system components.

Each product is labelled in accordance with BS8610:2017 and EN795:2012. Labelling in conjunction with this manual defines the parameters for safe use. If unsure about your system consult your supplier.



Notes for Correct Operation

- › Ensure that the systems structural anchor is within its period of test in accordance with BS7883:2019.
- › Only use sockets that have been supplied by REID Lifting and have therefore been tested and certified to BS8610 and EN795.
- › Assemble the system only as instructed ensuring all component parts are present, in good condition and securely fastened.
- › Only assemble the product in a safe environment. Protect both personnel and components against the risk of falling.
- › Take care when transporting and storing the system to avoid damage.
- › The anchor point or re-direct sheaves should always be above the users' head to prevent dangerous free falls.
- › Always carry out pre-use checks before using this equipment. It is advised to use a buddy system and inspection must be by a competent person.
- › Do not use this product if the kingpin shaft is not seated correctly in the socket.
- › Do not use this product if it does not rotate freely in the bearing or the bottom flange is fouled in any way, preventing free rotation.
- › Familiarise yourself with the maximum permissible angle of deviation and pivot before using the system.
- › Fall arrest devices and ropes must only be attached to the designated anchor points by competent persons.
- › Never walk away from the footprint of the product or move outside designated safe zones whilst connected to it where there is a risk of a fall.
- › When using the product as a fall arrest anchor ensure there is adequate fall clearance when working at height. A competent person should calculate this considering all of the components of the personal fall arrest system and allowing a safety margin.
- › Always consider the potential effects of sharp edges, chemical reagents, electrical conductivity, cutting, abrasion, climatic exposure on all components of the fall protection system, and the effect of offset forces because of pendulum falls.
- › If the product has been subjected to a fall arrest or impact force it must be immediately removed from service.
- › The substrate of the structure on which the product is placed must be able to sustain the loads specified for the device in all orientations permitted, including a safety factor of at least 2.
- › Never exceed the number of allowable users.
- › Never adjust the product whilst a person is attached to it.
- › Ensure that any fall protection system components being used are compatible and meet the requirements of applicable standards.
- › When using this equipment ensure that there is a rescue plan prior to starting work and ensure that users are trained in the correct execution of the plan and have all necessary rescue equipment to hand.
- › Where required by regulation, each installation must be approved by a qualified person.
- › Always wear appropriate PPE when installing, setting up, dismantling and using this equipment. Gloves, safety boots and a hard hat are recommended.
- › Misuse of this product could result in serious injury or death.

Warning

- Do not exceed the maximum user weight of the davit or the weight allowed by the lowest rated piece of equipment used in the system.
 - This equipment must only be assembled, installed and used by competent persons who have been trained in its correct application and use.
 - Ensure that working procedures prevent individual lifelines from crossing and becoming tangled.
 - When using the product in conjunction with another manufacturer's fall protection products, ensure that you have read the instructions for use of those products to ensure their suitability and any restrictions for use.
 - Be aware of hazards when setting up or taking down. Such as trapping fingers in rotating parts.
 - Be aware of adverse weather conditions that may affect safe use of this product, such as high winds, snow or ice.
 - This equipment must not be used outside of its limitations or for any other purpose other than that for which it is intended.
- It is essential for safety that the product is withdrawn from use immediately and not to be used again until confirmed in writing by a competent person should;
 1. Any doubt arises about its condition for safe use or;
 2. It has been used to arrest a fall
 3. It has been used for any other purpose, other than as a component of a personal fall protection system.



The following information is based on REID Lifting's recommendations and does not remove the responsibility of the user to comply with the relevant regulations and standards that are valid in the respective countries and regions where the system is being used.

Inspection Before Use

Before use, the product should be inspected for visual defects using the checklist below:

- Ensure kingpin, beam and column are free from dents or indentations.
- Ensure kingpin, beam and column are not showing any signs of deformation.
- Ensure that there is no elongation of the beam holes and that the inserts have not become loose.
- Ensure that the beam clevis pins are straight and free from damage.
- Ensure that the sheaves rotate freely and that there is no visible damage.
- Ensure no bolts are loose.
- Ensure anchor connection points are free from deformation or any damage

Test the free rotation of the kingpin and ensure that it is fully engaged in the socket. The lower bearing at the bottom of the column needs to be flush with the top of the socket.

Regular Inspections

To ensure that the product's structure remains in safe working order it must be inspected regularly by a competent or qualified person. We recommend inspections every 6 months for personnel lifting, unless local regulations, adverse working conditions or profile of use and risk dictate shorter periods. The components of the system need to be checked for damage, wear, corrosion or other irregularities. It may be necessary to disassemble the system in order to do this. Particular attention should be paid to checking the profiles for denting, pins and fixings for integrity, making sure there is no wear or elongation on the bolt holes and ensuring that the sheaves rotate freely.

Anchor systems [sockets] should be periodically inspected by a competent person, authorised by the manufacturer in accordance with BS7883:2019.

It is recommended that once inspected or repaired, the device/anchor is marked with the date of the next inspection. Inspections are instigated by the user. If detailed information is required on inspection and test criteria, please contact your supplier's technical department or REID Lifting.

Maintenance & Repair

In order to ensure correct operation, the conditions for inspection and maintenance must be complied with. If any defects are found, stop using the product immediately.

No alterations or additions to the equipment beyond the replacement of standard parts by an authorised representative should be made without the written consent of the manufacturer. Any necessary repairs identified during inspections should only be carried out by an approved specialist workshop using original spare parts. Any repair must be carried out in accordance with the manufacturer's instructions.

It is recommended to maintain the equipment in a clean and dry manner. Cleaning is suggested using a sponge or cloth with warm, soapy water, rinsing and allowing to dry.

This product must be assembled using metric fixings of the same type and quality as those supplied by the original manufacturer only. Failure to do so could have an impact on the structural performance and stability of the product. REID Lifting and its resellers can supply these spare parts locally.

Storage & Transportation

When transporting the components, take note of all the manual handling considerations.

Do not throw the product down or stack any items on top of it.

Always place carefully and securely on the ground to avoid damaging the equipment.



Sockets

REID's davits need to be secured in a socket which is anchored to a suitable structural surface/foundation capable of withstanding the applicable loading. We strongly recommend that a structural engineer validates this prior to installation of the product.

Socket installations should be in accordance with BS7883:2019 Code of Practice for Personal Fall Protection Equipment. Anchor systems. System design, installation, and inspection. For further guidance refer to our installation instructions for our sockets.

This product is normally supplied with one of the sockets specified (only sockets supplied by REID Lifting are approved to be used with this product):

- › The Top Mount socket is for use on flat horizontal surfaces. It can be installed onto concrete using resin bonded anchors or into steel work using bolts. This socket is tested to BS8610:2017 and EN795:2012
- › The Side Mount socket can be installed using resin bonded anchors or mechanical anchors or onto steelwork using bolts. This socket is tested to BS8610:2017 and EN795:2012

- › The Bridge Mount socket is for mounting into steel work and walkways. BS8610 compliance can be proven by engineer calculation.
- › The Cast & Resin Bonded sockets can be cast into new concrete or resin bonded into existing concrete. BS8610 compliance can be proven by engineer calculation.



Top Mount



Side Mount



Bridge Mount



Cast & Resin Bonded

Socket Installation

Site specific information regarding the installation of REID davit sockets CANNOT be detailed within this operating manual as each site/structure is different. A qualified engineer MUST design and approve each installation based on the minimum mounting requirements, site information and experience.

When checking socket installations before use, it is important to ensure that the top face is as level as possible, with misalignment of no more than 3 degrees from horizontal.

For further information about our sockets and their installation refer to our technical data sheets for these products.

Disclaimer

- › REID lifting sockets & extensions have been designed, developed and tested for safe use with REID equipment and form a key part of the integrity of the total system
- › All sockets have a maximum moment based on the maximum reach setting of the Davit, and the socket installation and verification tests performed
- › If non-standard, third-party sockets are used, REID Lifting's Declaration of Conformity & Incorporation and warranty for the products is no longer valid and the system becomes the responsibility of the client

➤ Assembly Instructions

The TDAVIT and its constituent components are described in the image below.

The socket type may vary between a Top Mount, Side Mount or our **PORTABASE** depending on product variant.

The TDAVIT shown is variant TDRAC50001.



Appropriate PPE should be worn: ➤ **Gloves** ➤ **Protective Footwear** ➤ **Hard Hat**




Assembling the TDAVIT




- Insert the T DAVIT into the socket as shown



- Secure the column to the socket by connecting the supplied lanyard to the gusset

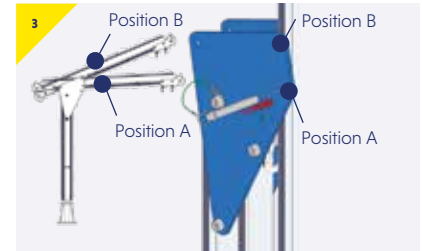


- The T DAVIT beam can be assembled at 2 positions [Position A or Position B] Ensure the correct set-up is chosen before assembling the beam

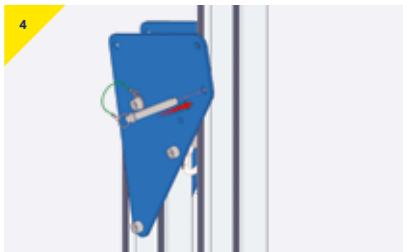


- Present the beam to the chosen location and insert the clevis pin




- Secure the pin with retaining R-clip

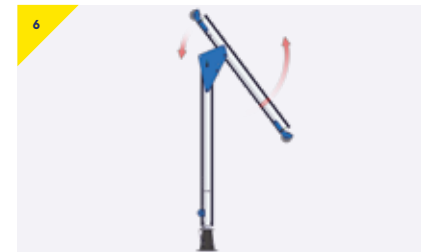

- Rotate the beam as illustrated

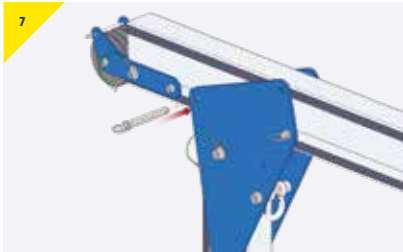

- Insert the clevis pin to take the weight of the beam

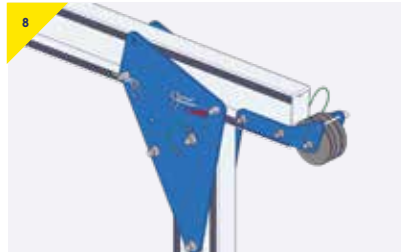

- Secure the pin with the R-clip



- For disassembly, reverse steps 1-7

Fall Protection Anchors



- Anchor points located at the back of the column



- Anchor point located between the cheek plates



- Indicative image for rope rigging

Variants & **Options.**





TDRAC50001



Suitable Sockets




Top Mount




Side Mount

Compliance Label

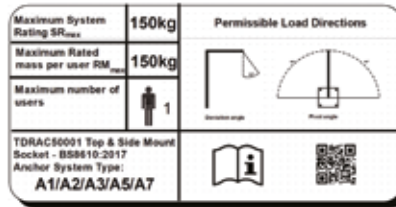

Max Deviation Angle



*Deviation angle applicable to fixed sockets only.

Max Pivot Angle

Socket	Socket Type	TDRAC50001
Side Mount Socket*	Concrete rear loading [over the wall] Socket 80mm below edge	±90°
	Steel	360°
Top Mount Socket	Concrete [325mm from edge]	±90°
	Steel	360°

*For forward loading applications for the Side Mount, please contact your REID representative.



Side Mount - Concrete [rear loading]



Side Mount - Steel



Top Mount - Concrete



Top Mount - Steel

